

NOTE: IT IS VERY IMPORTANT TO READ AND FOLLOW THE DIRECTIONS IN THE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING WITH THIS REAR WALL TEMPLATE.

CUT WALL TEMPLATE FROM TOP CABINET TEMPLATE ALONG WITH THE DASHED CUTTINGLINE. REFER TO (---) CUT ALONG THIS LINE)

This template is for locating the horizontal exhaust cutout. Do not use this template for vertical or recirculation exhaust.

1. Place the template flat against the rear wall, aligning the circles A. and B. with the corresponding holes previously drilled in the rear wall for holes A. and B. of the wall plate.


2. With the template aligned to the holes, tape the template to the rear wall.

3. Use a saber or keyhole saw to cut out the shaded area F. through the rear wall.

4. Remove the template from the rear wall.

5. RETURN TO AND PROCEED WITH THE INSTALLATION INSTRUCTIONS

Printed in China PN: 261800313994


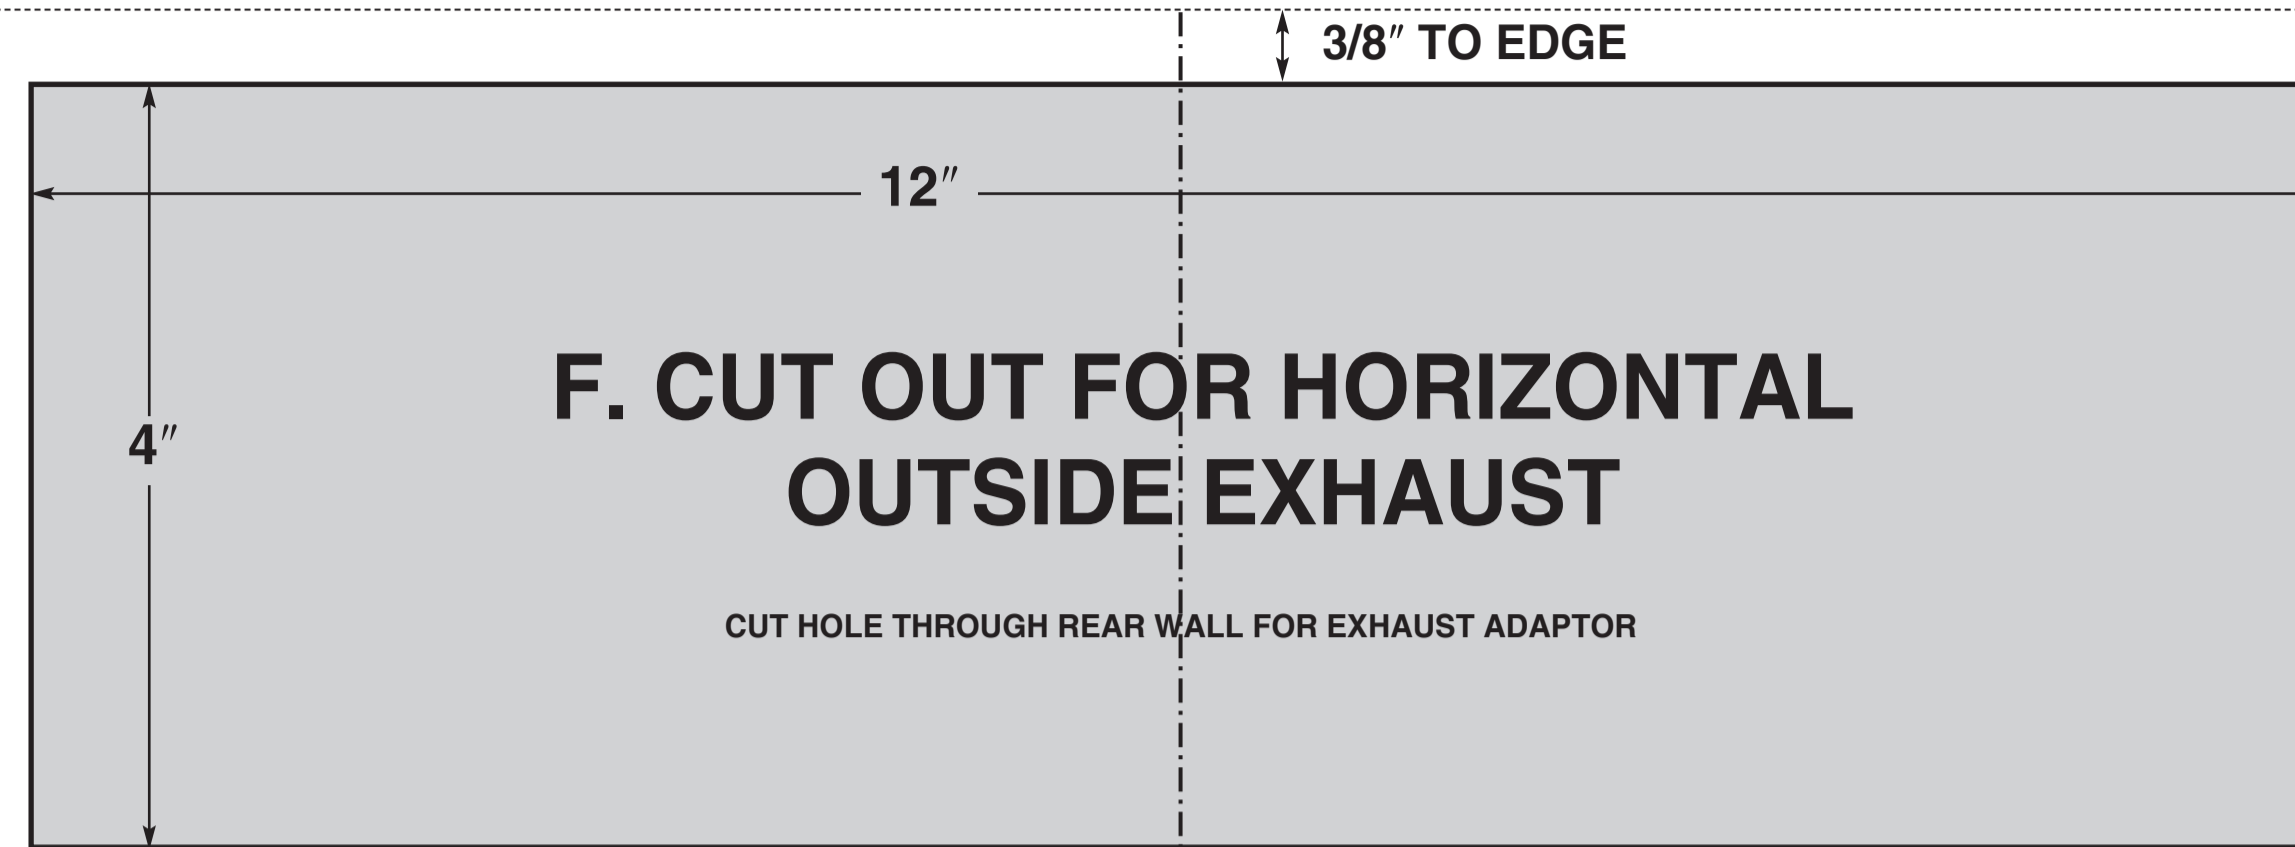


CAUTION- IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE RECOMMENDED DIMENSION. GREASE-LADEN AIR WILL DISCHARGE INTO HOUSE STRUCTURE.


REAR WALL TEMPLATE

30" MINIMUM WIDTH REQUIRED

Publish No: 31-41080

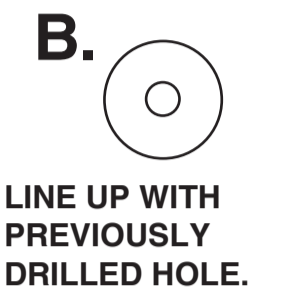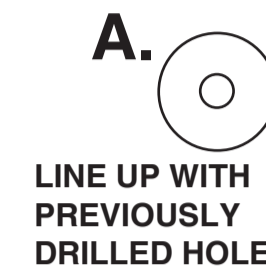

CUT ALONG THIS LINE

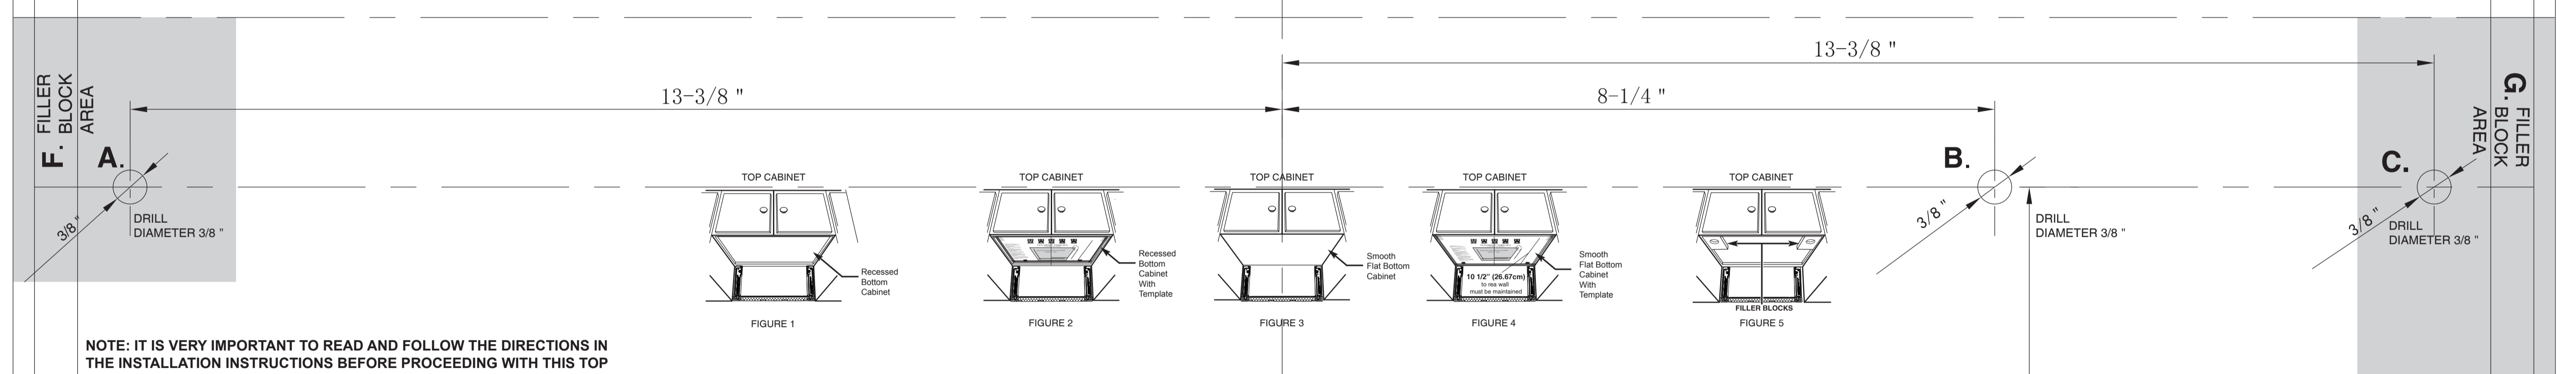

NOTE: IT IS VERY IMPORTANT TO READ AND FOLLOW THE DIRECTIONS IN THE INSTALLATION INSTRUCTIONS BEFORE PROCEEDING WITH THIS TOP CABINET TEMPLATE.

This template is used to locate the power cord clearance hole, cabinet mounting holes, and the vertical exhaust cutout.

1. Determine if your cabinet has a recessed area (Fig. 1) or a smooth, flat bottom (Fig. 3). If smooth, tape template onto the bottom surface (Fig. 4) and proceed to Step 3.

2. If it is recessed, cut the edges of the template to fit in the recessed bottom of the cabinet. It is important that the edges of the cabinets permit level installation of the oven. Follow directions below for cutting and mounting:

RECOMMENDED CUTTING PROCEDURE
Measure cabinet thickness of the sides A & C and the back B. Cut the edge of the template to allow for cabinet thickness (guideline is marked in 1/4" increments for your convenience).

NOTE: On some cabinets a small bracket or glue block is used between the overhang and the underside of the cabinet bottom. Cut the template to fit around the bracket or glue block so that template will lie flat against the bottom of the cabinet.

Tape the Top Cabinet Template to the underside of the top cabinet in the recessed area. (Fig. 2)

NOTE: Make sure the rear of the template touches the back wall (for smooth, flat bottom cabinets) or the back of the recess (for recessed bottom cabinets) after cutting the edges of the template.

3. Drill 3/8" diameter holes at A., B. & C.

CAUTION: Wear safety goggles when drilling holes in the cabinet bottom.

4. Cut out the 2" diameter hole at D for power cord. If cabinets are metal, use the nylon grommet (see the Parts Included section in the Installation Instructions) to surround the opening to protect the cord.

5. FOR VERTICAL EXHAUST ONLY. (Skip for horizontal exhaust or recirculation exhaust.)

Cut out shaded area labeled E. in the cabinet bottom for Vertical (Outside) Exhaust location.


6. Remove the top cabinet template.

7. For recessed cabinets, make 2 filler blocks out of scrap wood the size of the shaded areas F. & G.

These filler blocks must have a thickness equal to the depth of the cabinet recess. Drill 3/8" diameter holes in these blocks to line up with A. & C. Place the blocks so that the holes in each block line up with the corresponding holes in the cabinet. The filler blocks should be at the same level as the bottom edge of the wall cabinet frame (Fig. 5).

8. Return to and proceed with the Installation Instructions.

TOP CABINET TEMPLATE

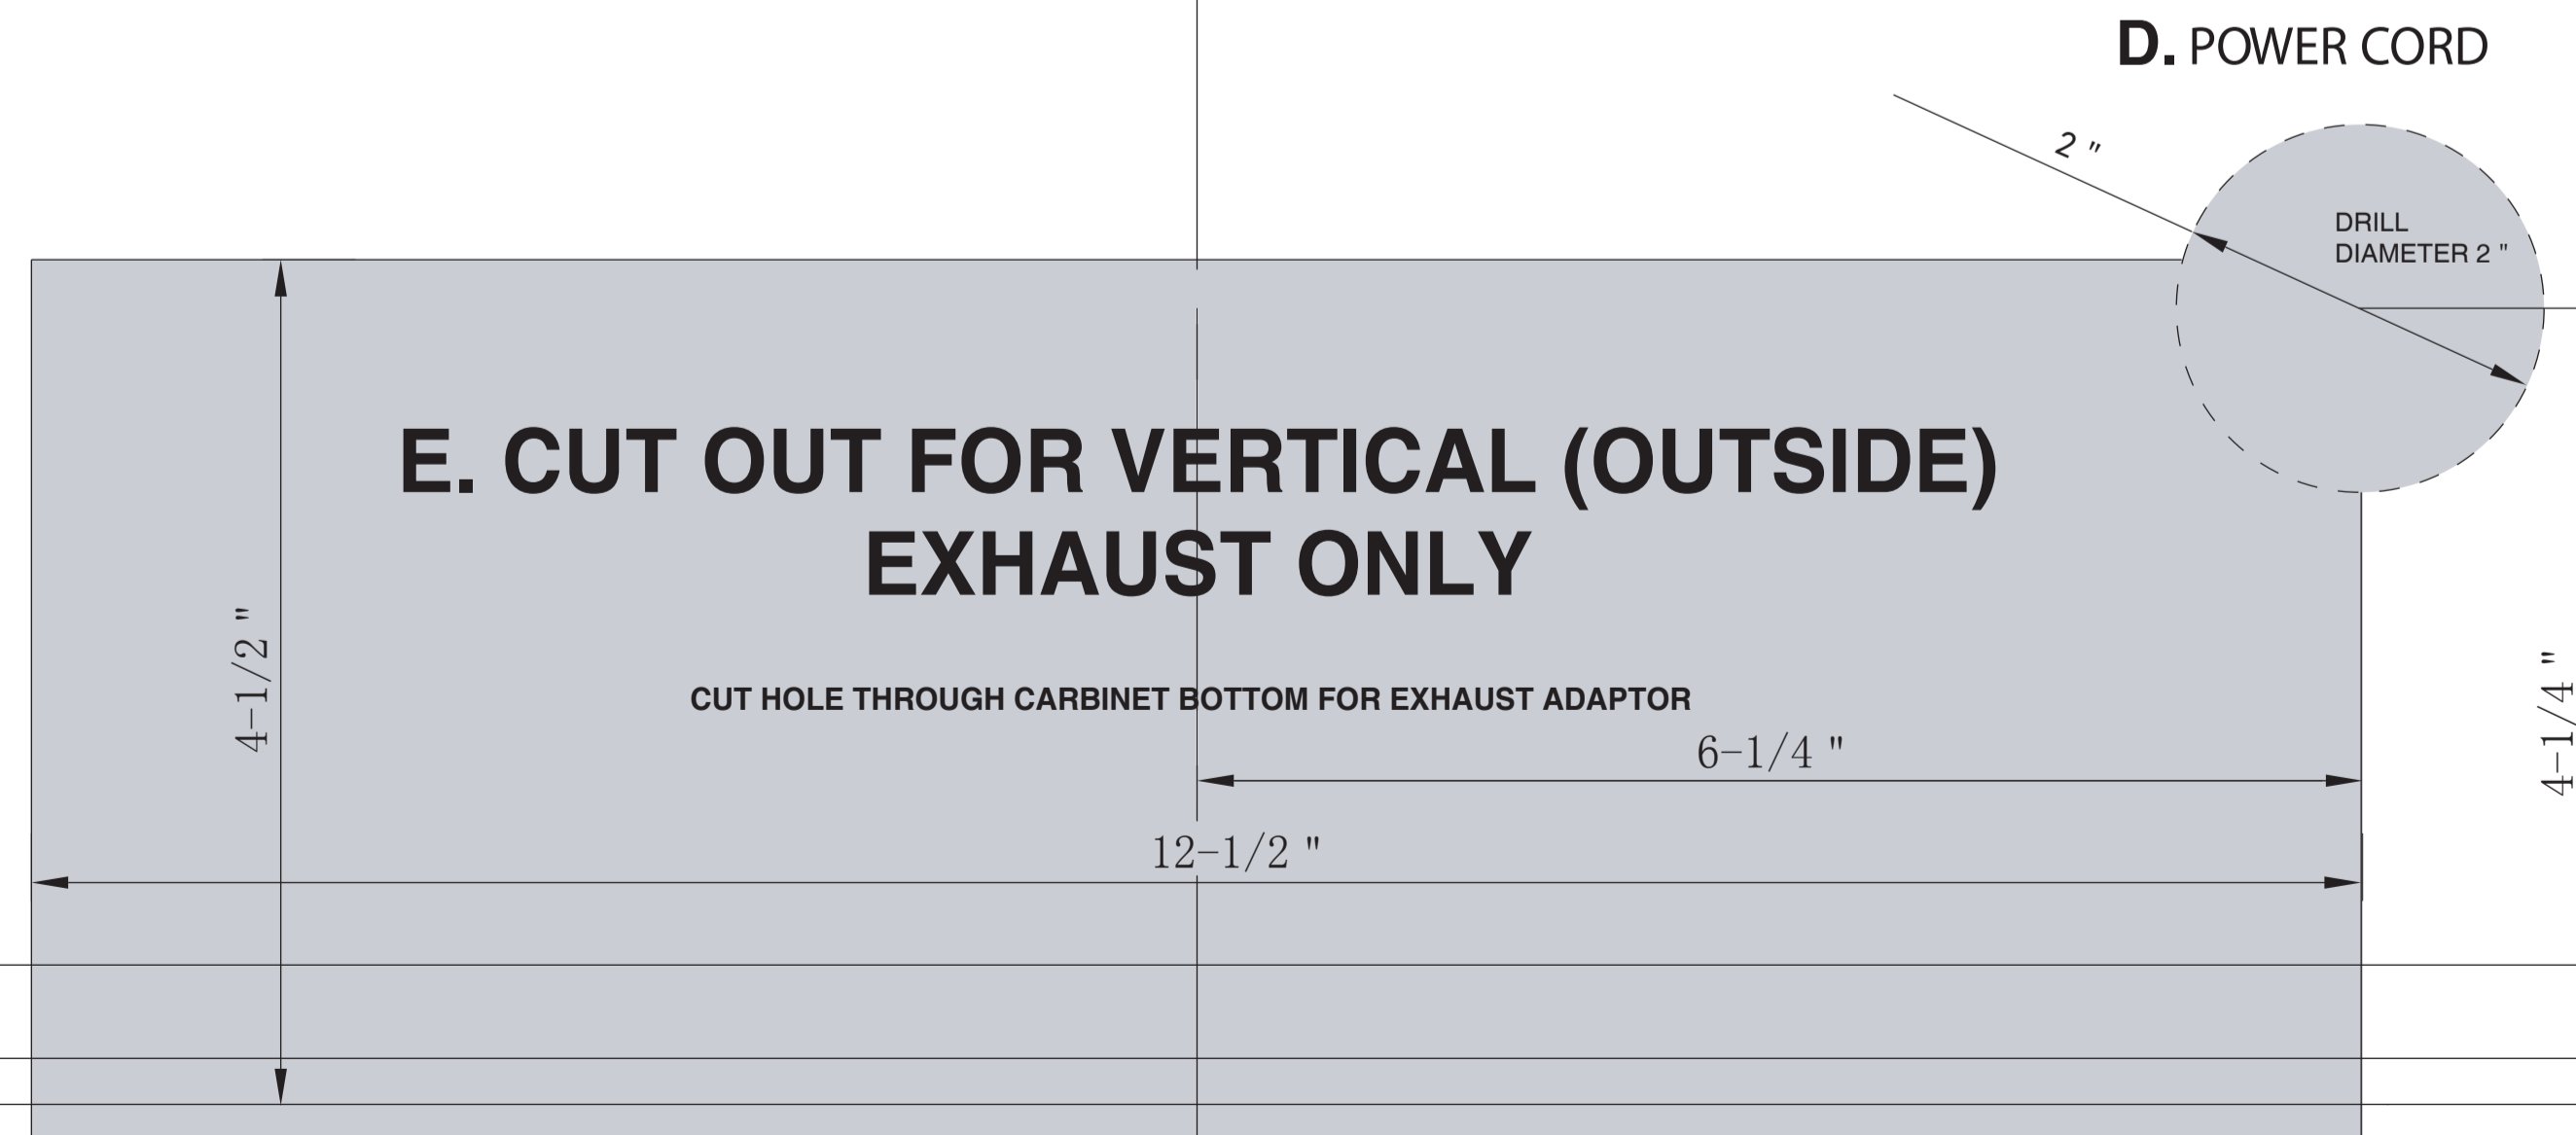

Publish No: 31-41080

LEFT SIDE

RIGHT SIDE

